


Lit COFFRE

Sommier 140 x 190 cm

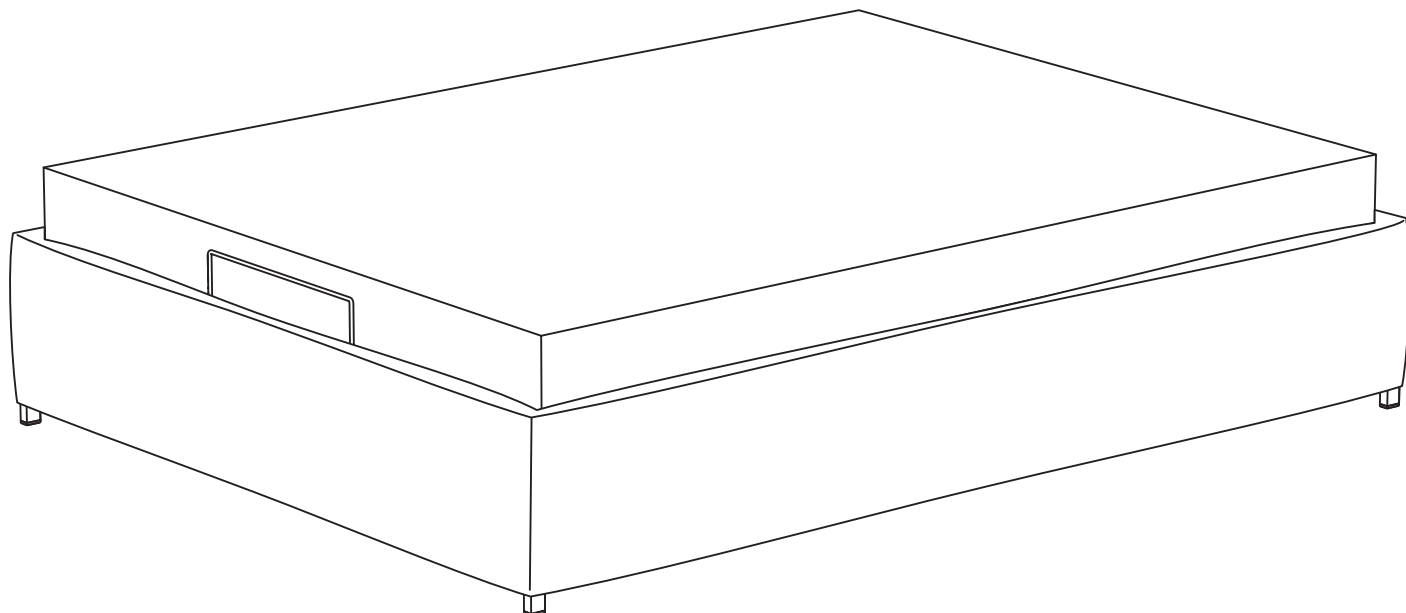

BIEN ETUDIER LA NOTICE DE MONTAGE.

REPERER LES PIÈCES CONSTITUANT VOTRE MEUBLE.

REGROUPER ET CONTRÔLER LA QUINCAILLERIE.

MUNISSEZ-VOUS DE L'OUTILLAGE NÉCESSAIRE.

AMÉNAGEZ-VOUS UNE ZONE DE MONTAGE.

PROCÉDER AU MONTAGE.

NE JAMAIS FORCER LES ASSEMBLAGES.

RESSERRER LES VIS APRÈS QUELQUE TEMPS D'USAGE.

GARDEZ VOTRE NOTICE DE MONTAGE, SI UNE PIÈCE VENAIT À MANQUER, ELLE SERAIT LE PLUS CLAIR MOYEN DE COMMUNIQUER AVEC VOTRE MAGASIN.

READ THE ASSEMBLY INSTRUCTION CAREFULLY.

IDENTIFY THE ELEMENTS CONSTITUTING YOUR PIECE OF FURNITURE.

GROUP AND CHECK THE HARDWARE FITTINGS.

GET THE TOOLS NEEDED.



CLEAR SPACE TO WORK.

PROCEED TO ASSEMBLE.

NEVER FORCE THE FITTINGS.


TIGHTEN THE SCREW AFTER USING FOR SOMETIME.

KEEP YOUR ASSEMBLY INSTRUCTIONS, IN THE EVENT OF QUIRY, PLEASE CONTACT YOUR SUPPLIER.

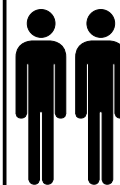


60 mn


Sommier et entourage de lit livrés séparément
Slats and bed cover delivered separately

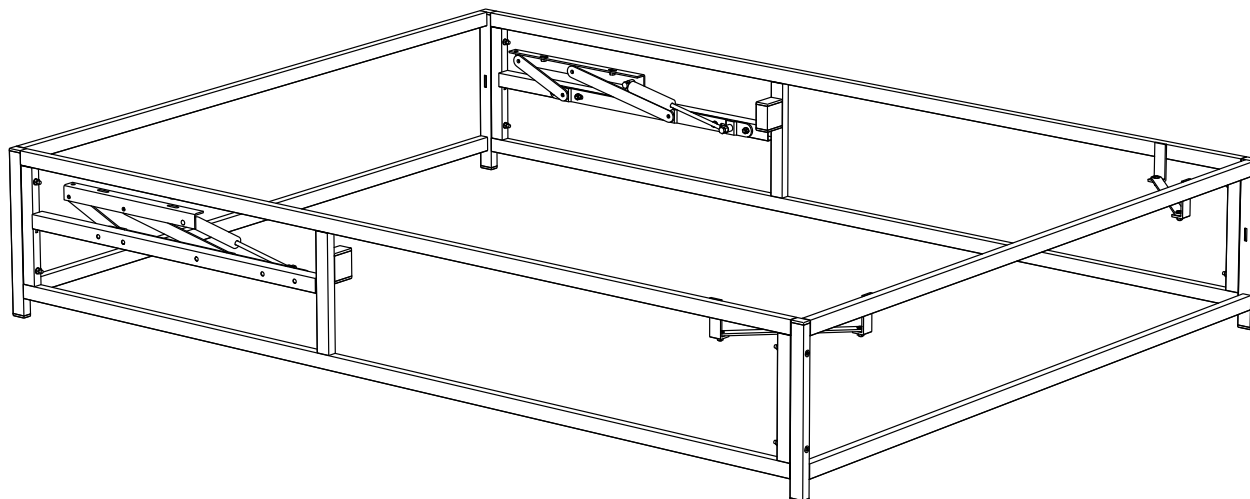


VUE ÉCLATÉE - EXPLODED VIEW

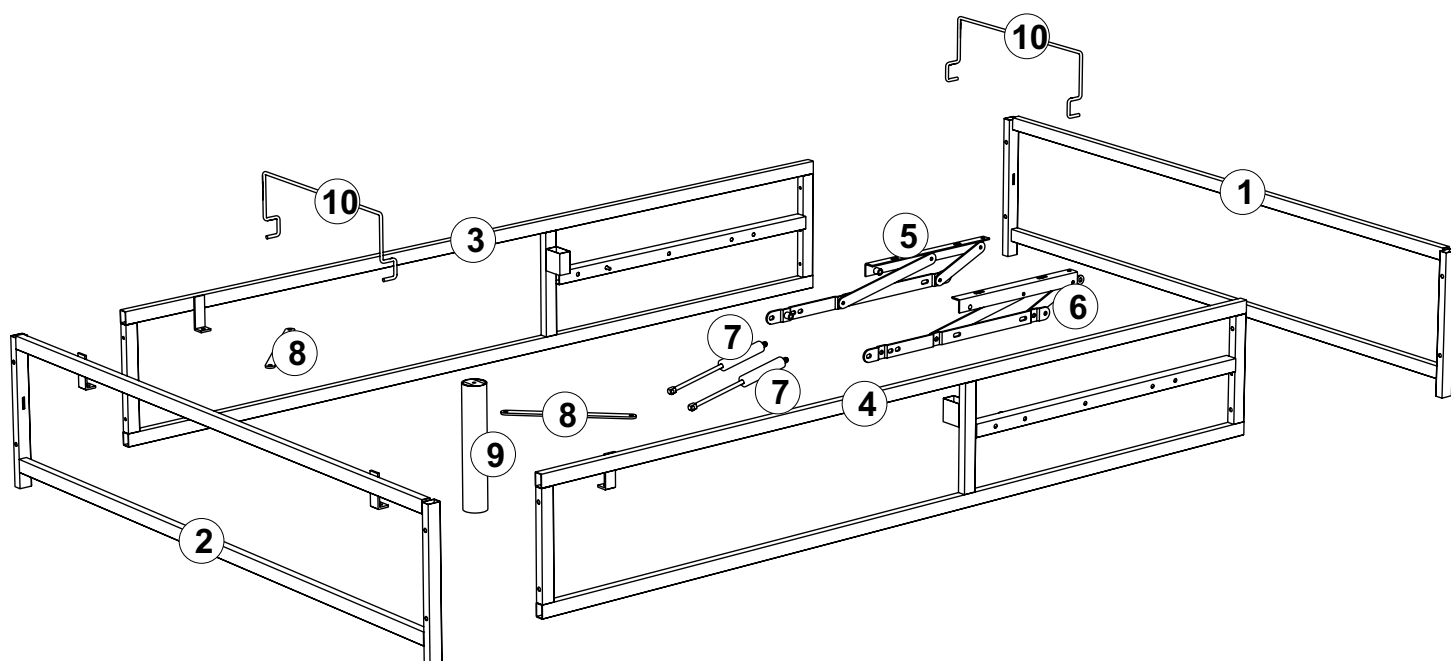


QUINCAILLERIE - HARDWARE

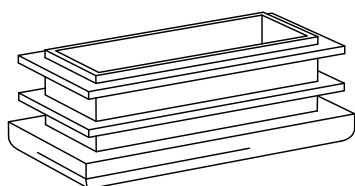


I x4

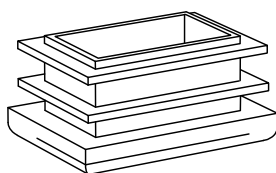

A x8




G x4




B x8



H x1




C x24



D x4





E x8

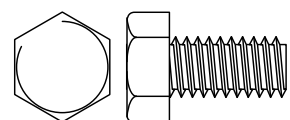


F x4


OUTILLAGE - TOOLS



NON FOURNI - NOT SUPPLIED

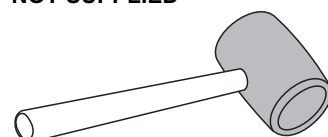


1 ▶

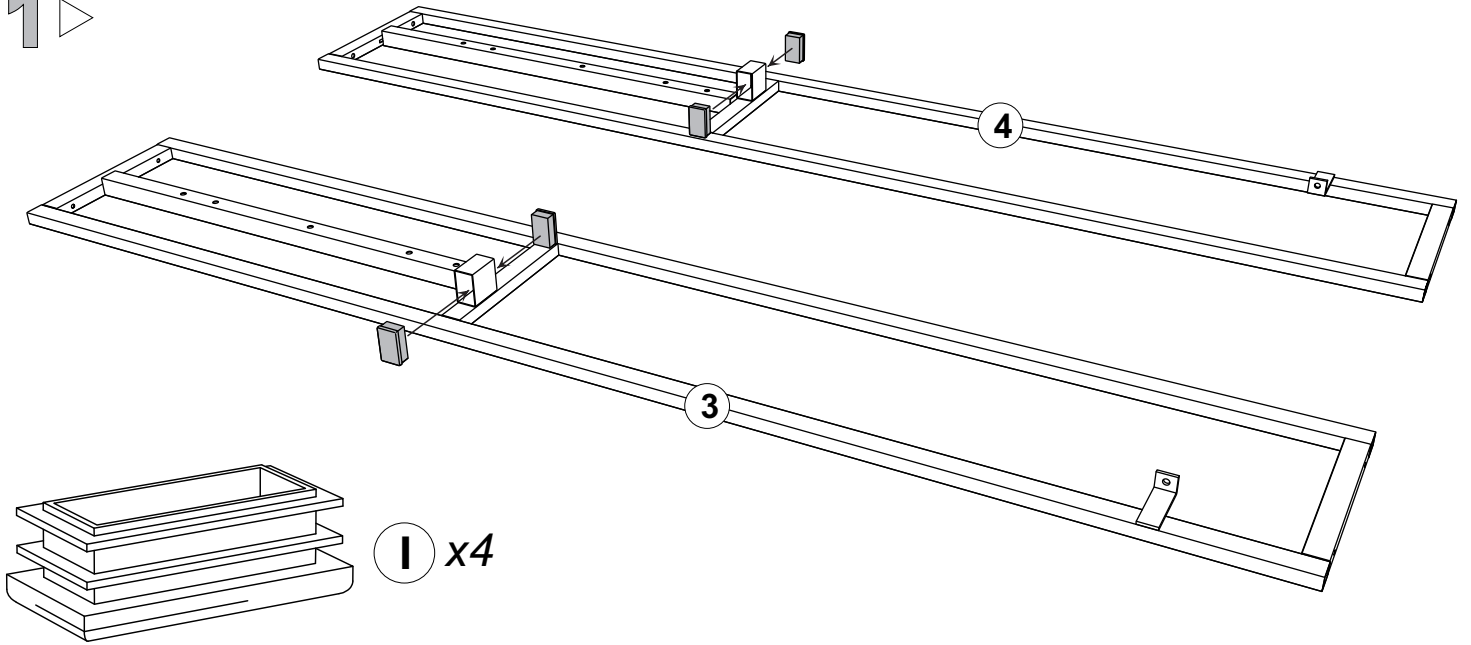


1 x4

2 ▶



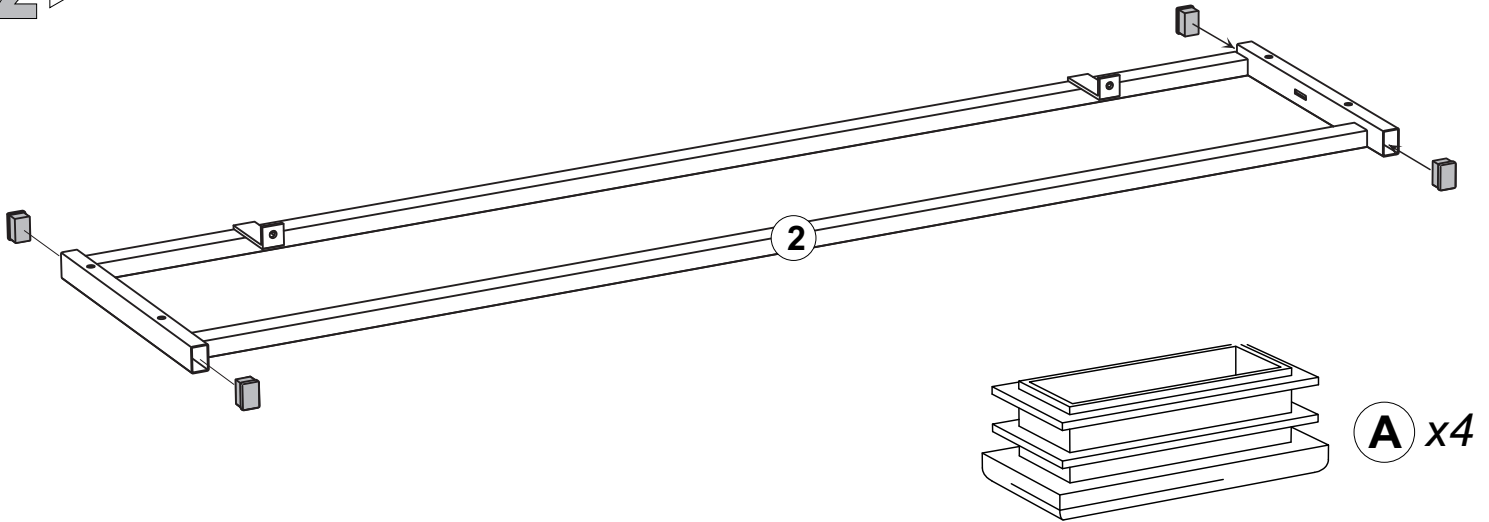


A x4



3 ▶

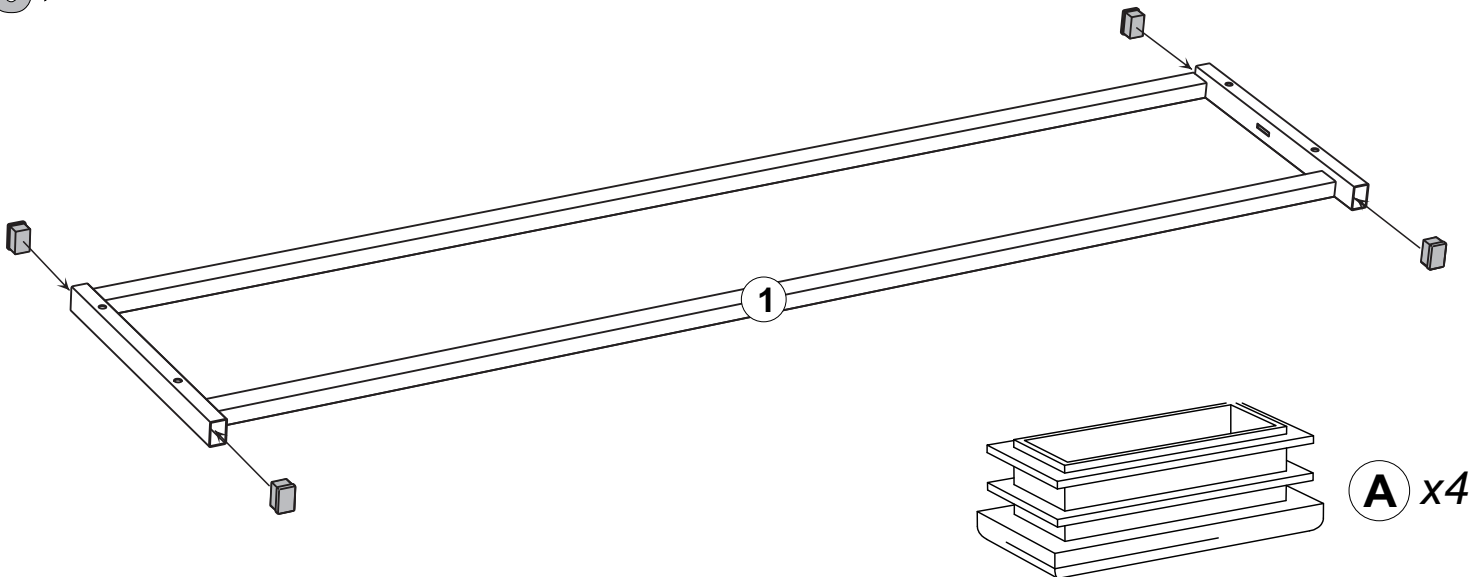



A x4

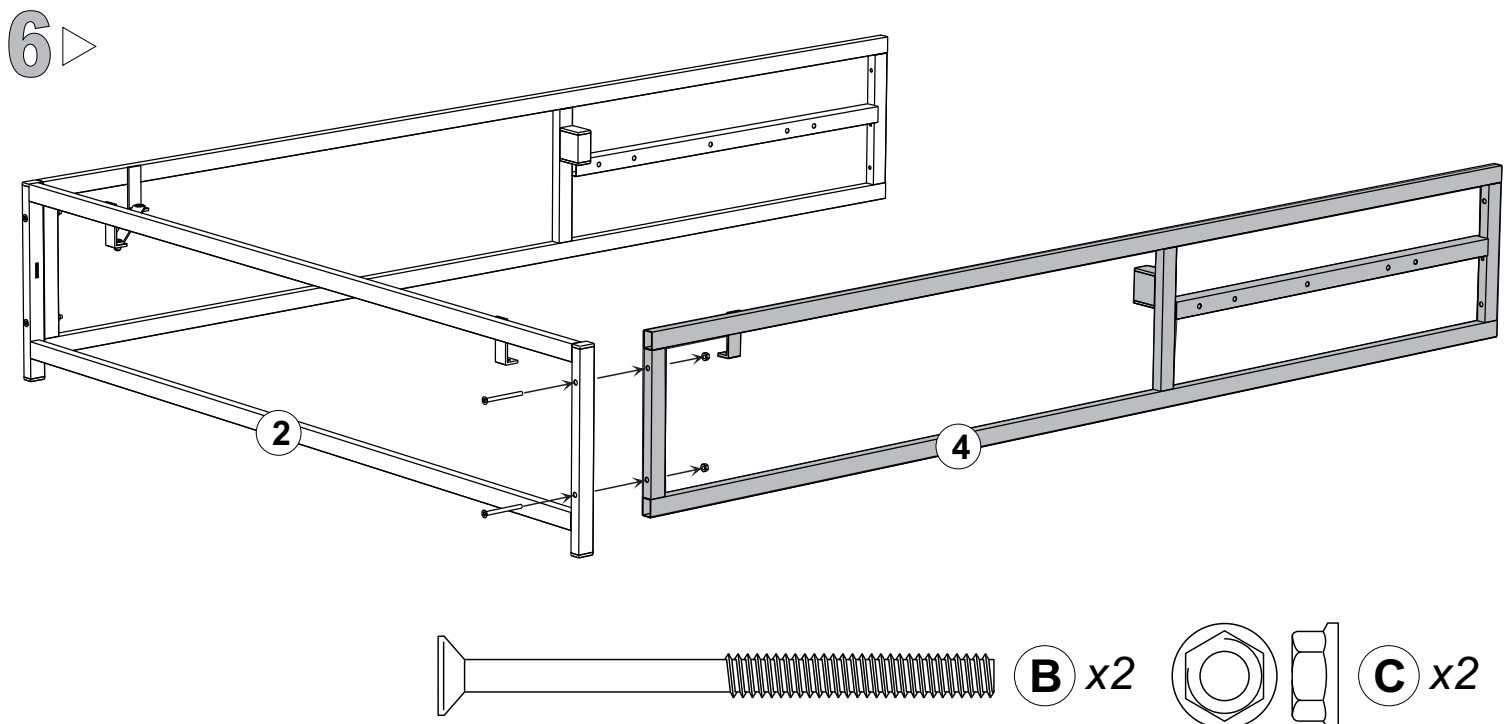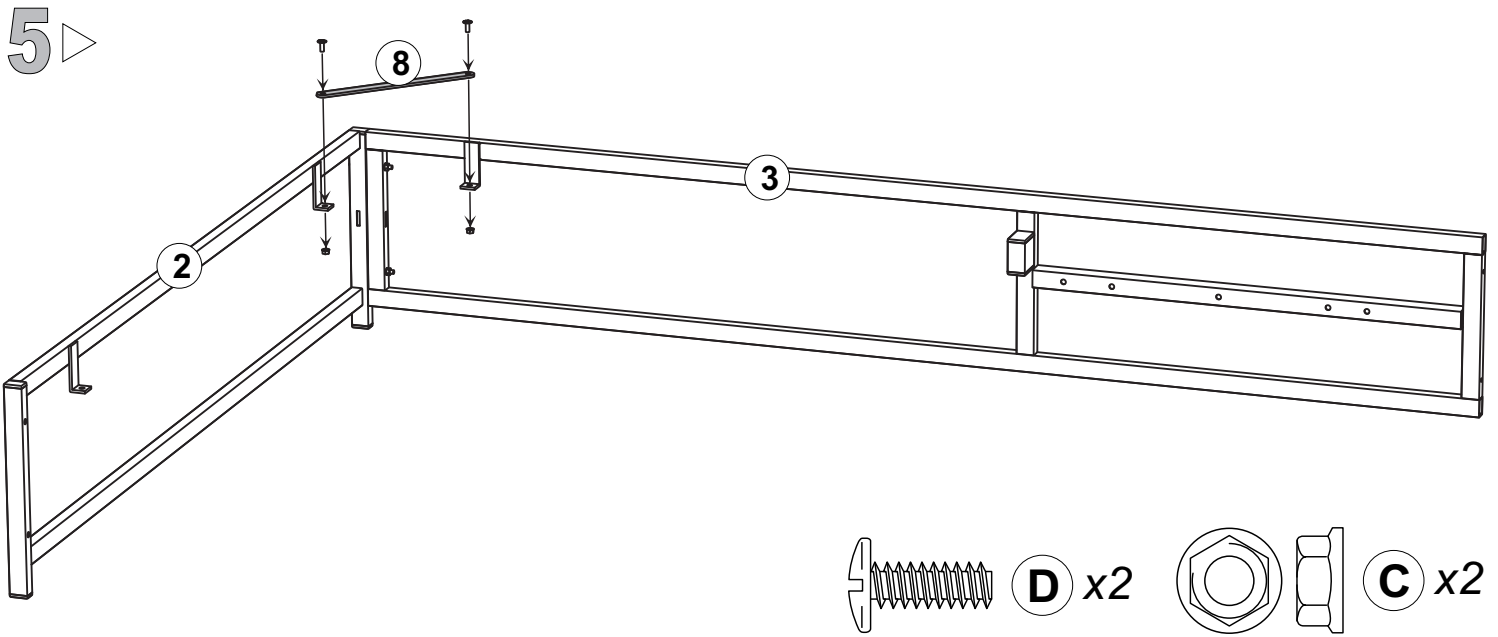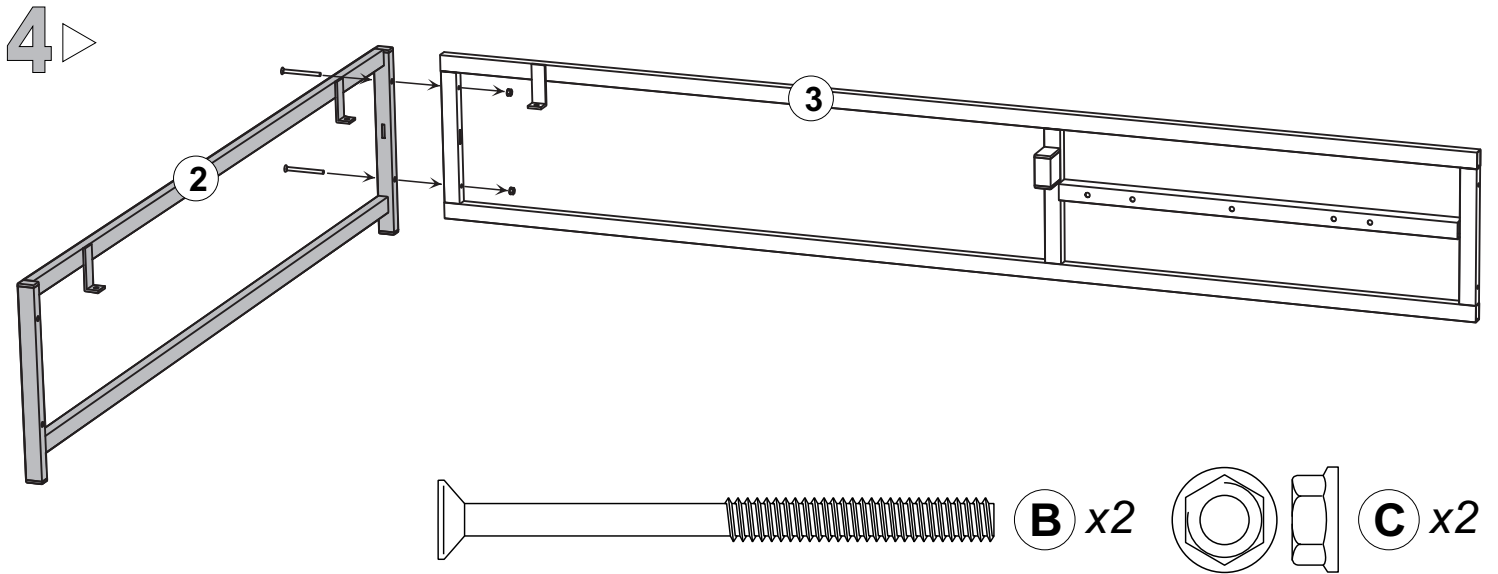




7 ▶

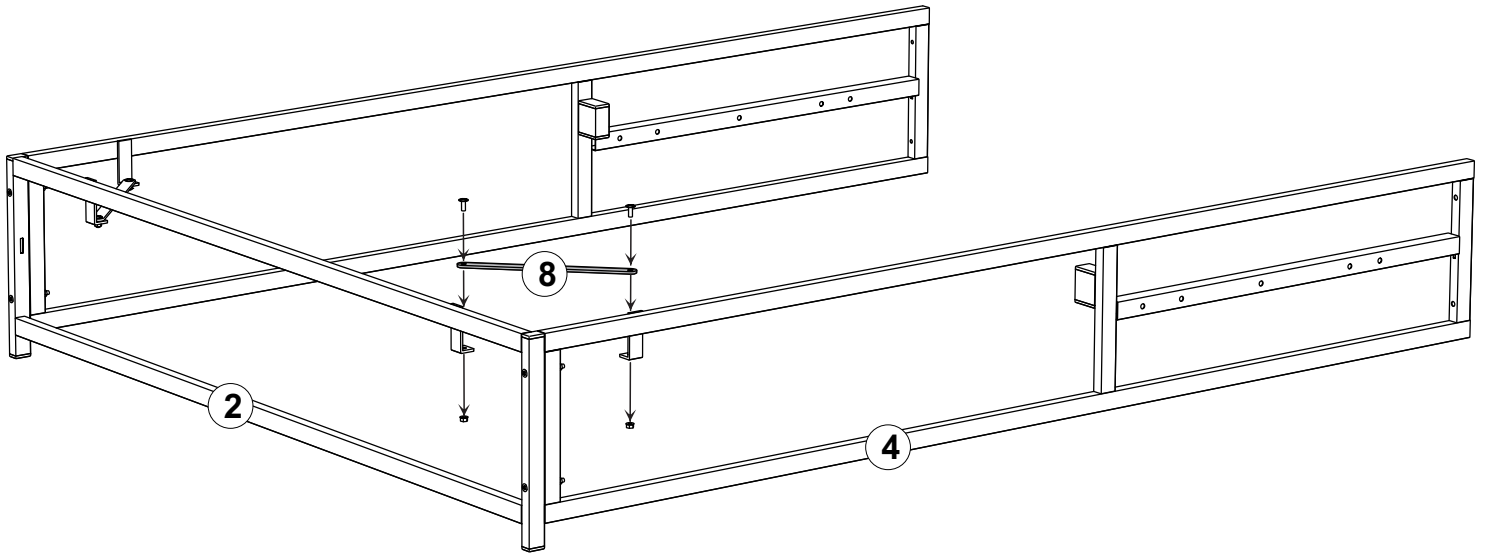




8 ▶

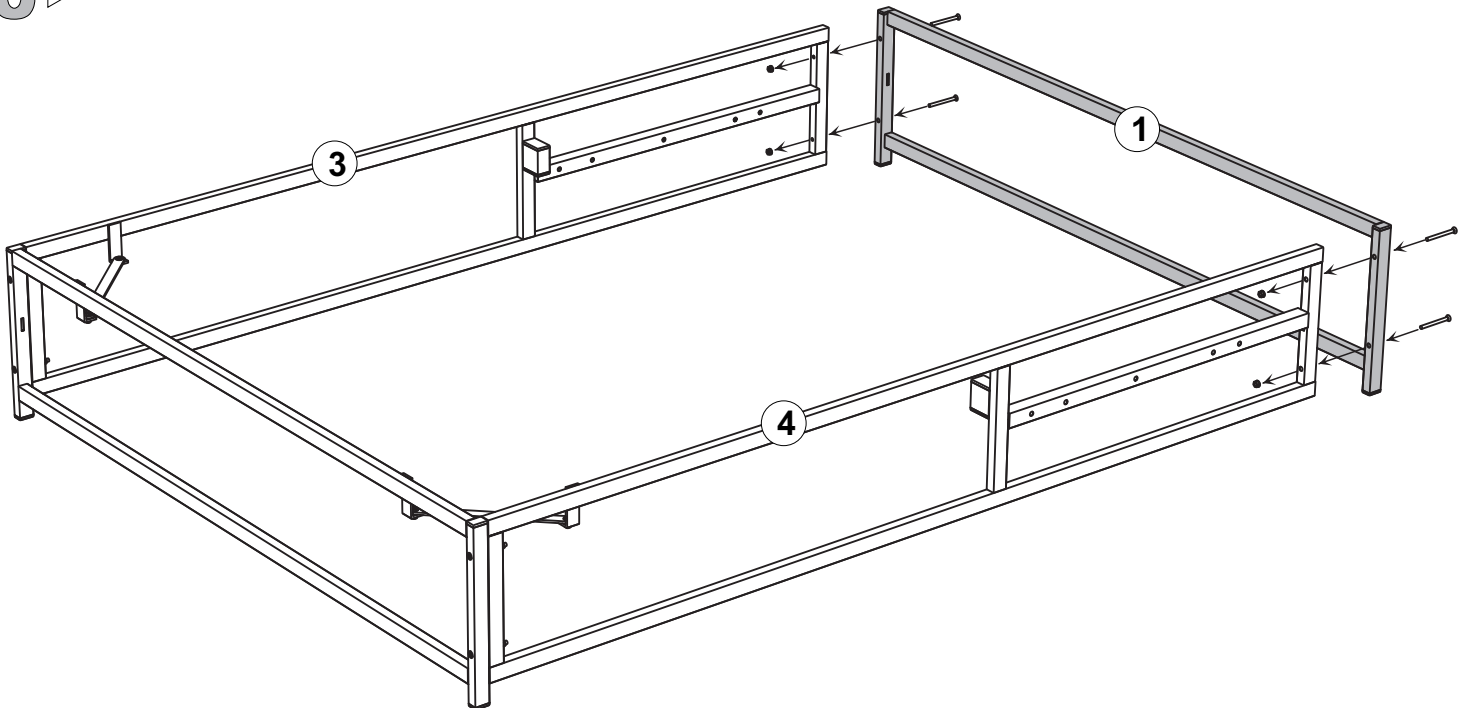




9 ▶

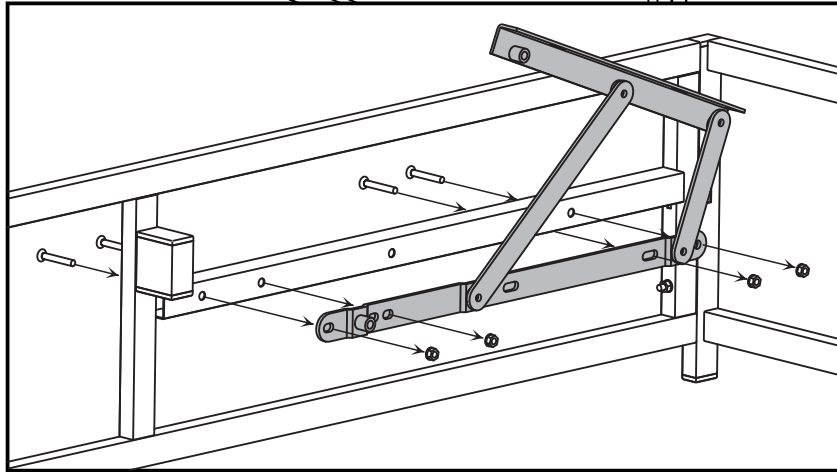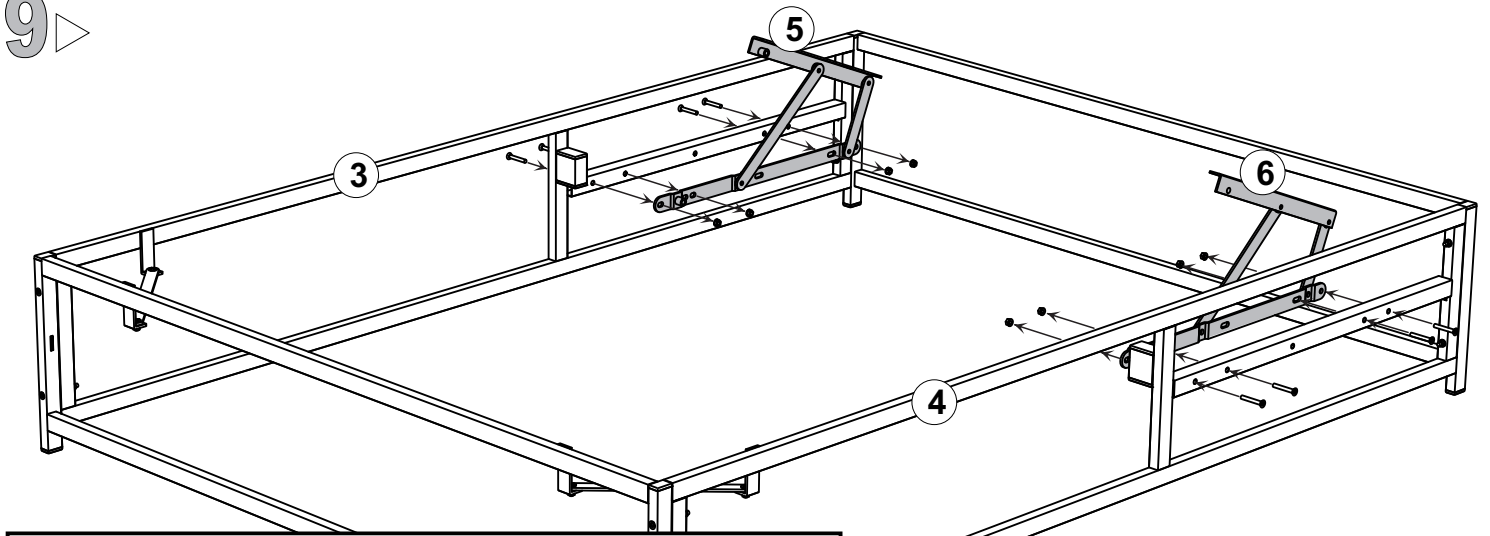





10 ▶

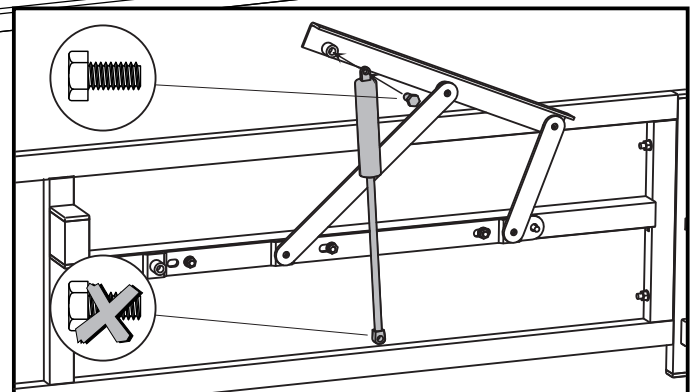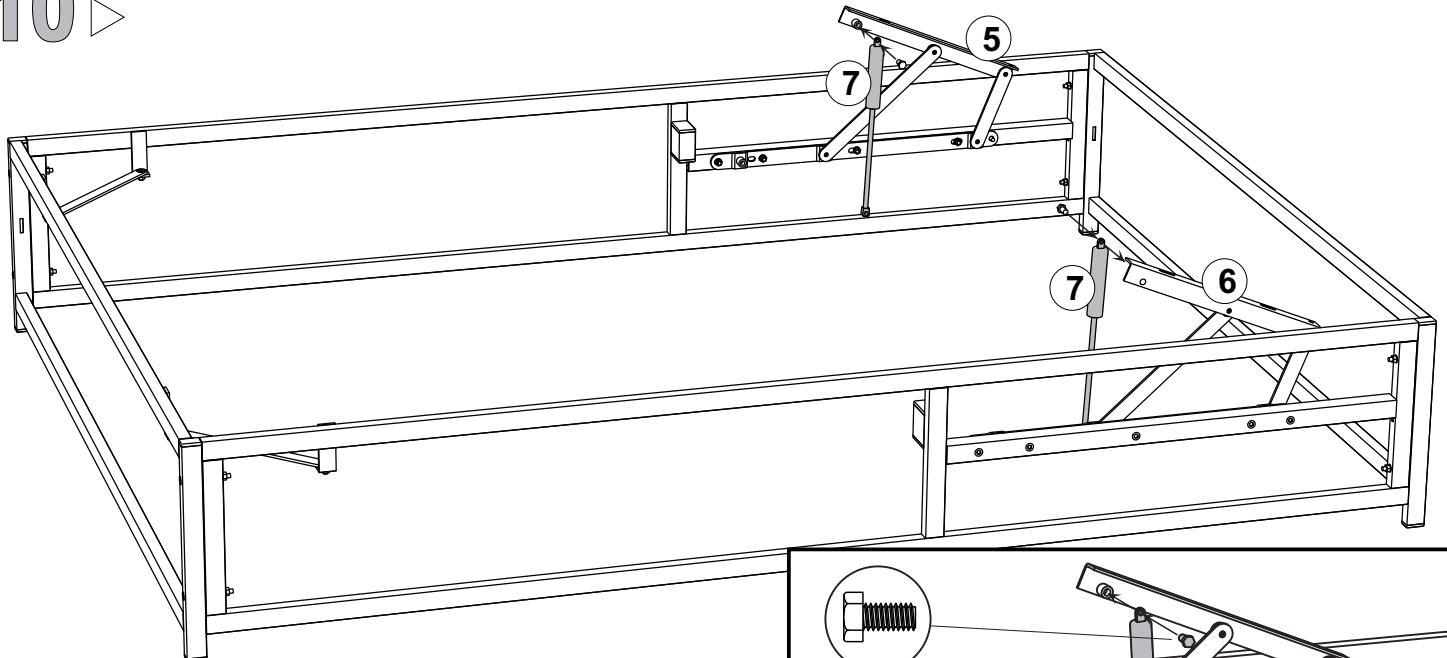


11 ▷

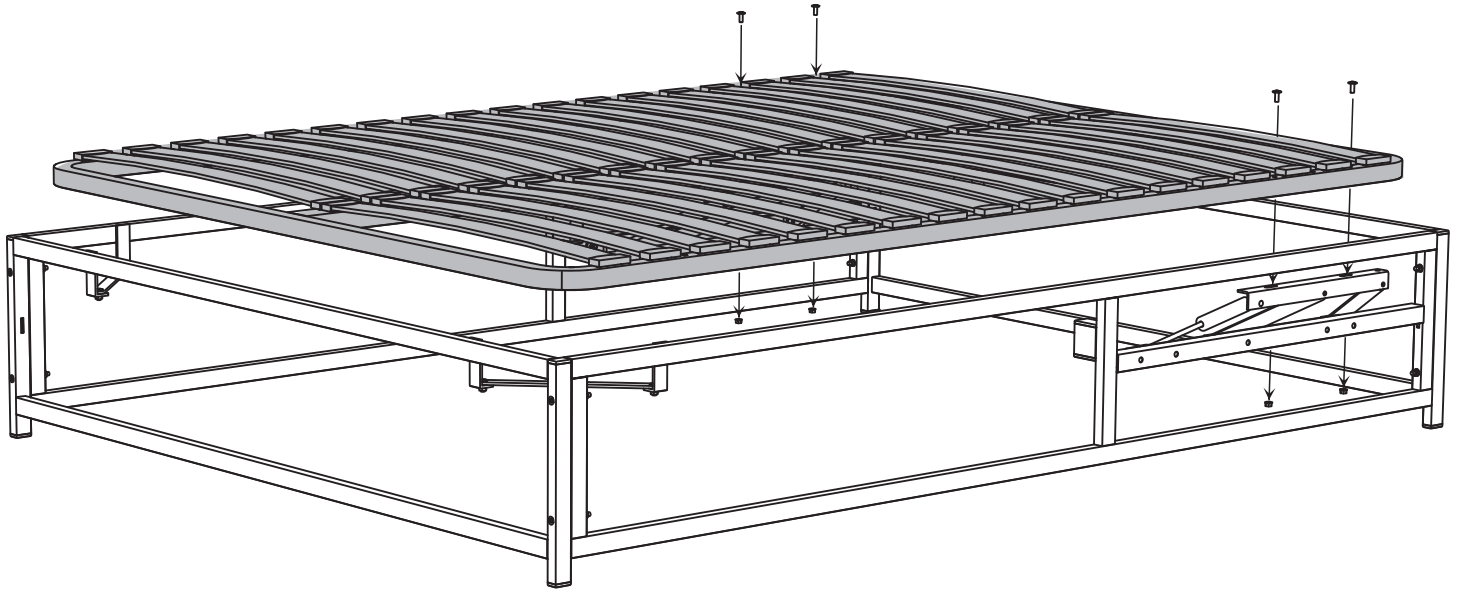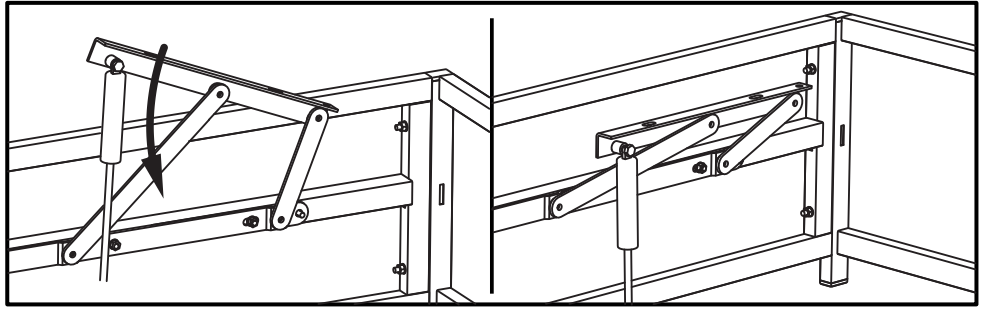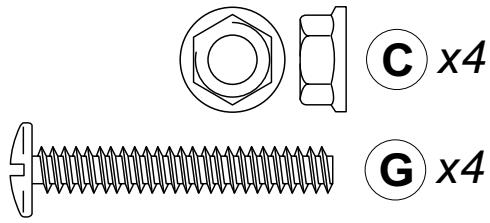


12 ▷

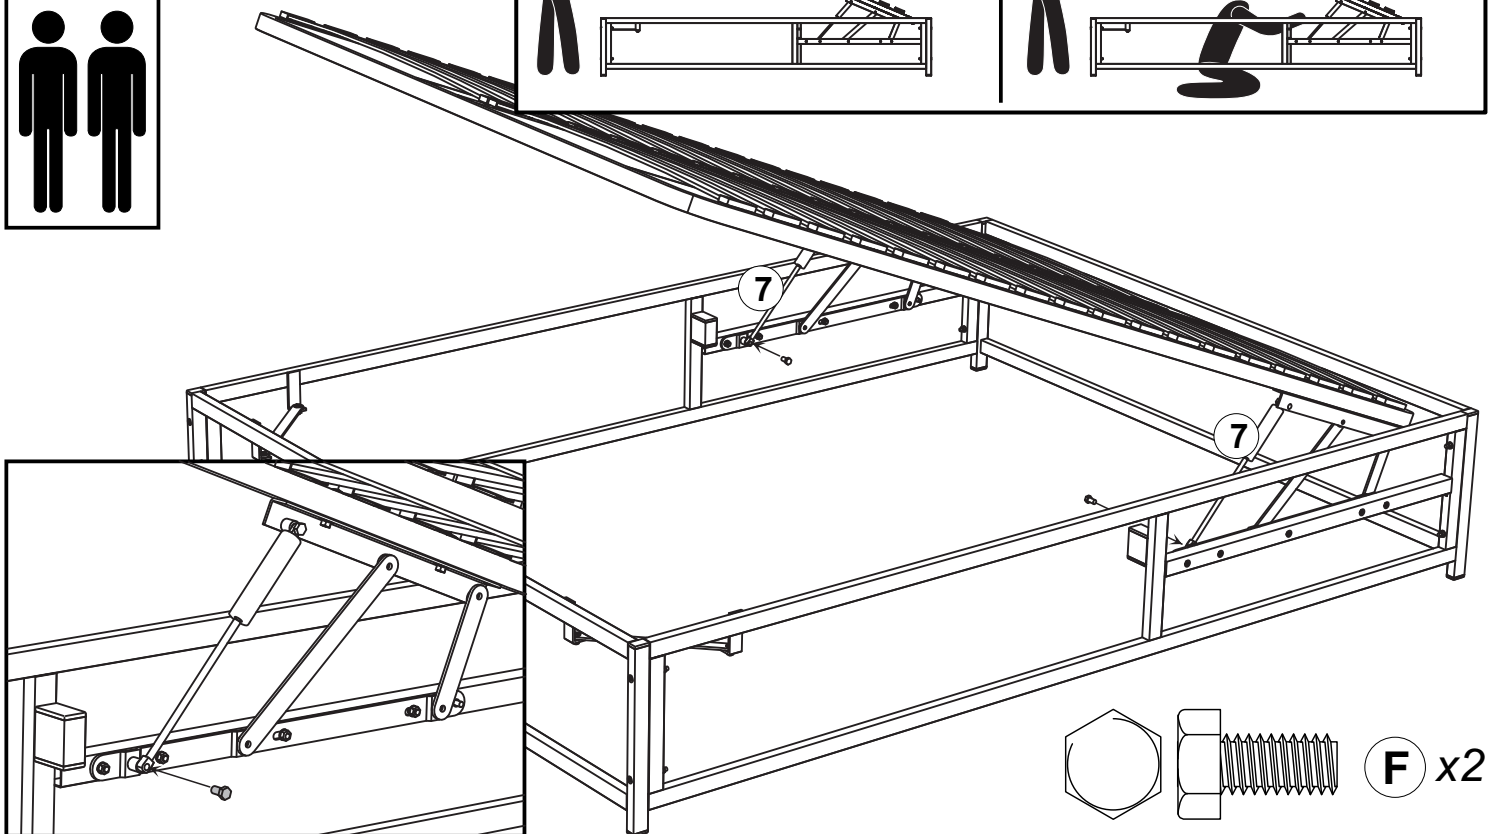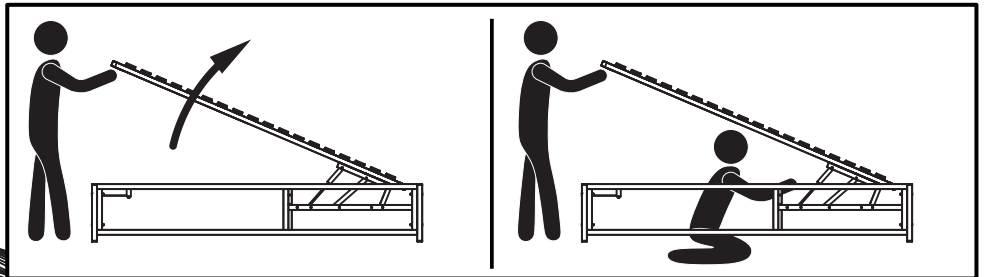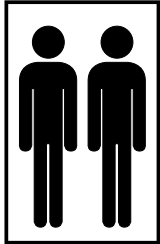

13 ▷

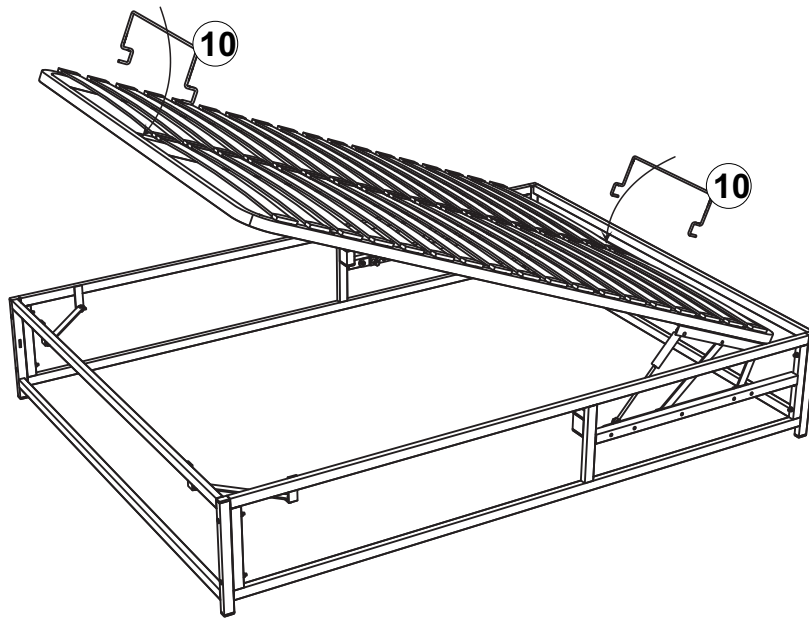

14 ▷

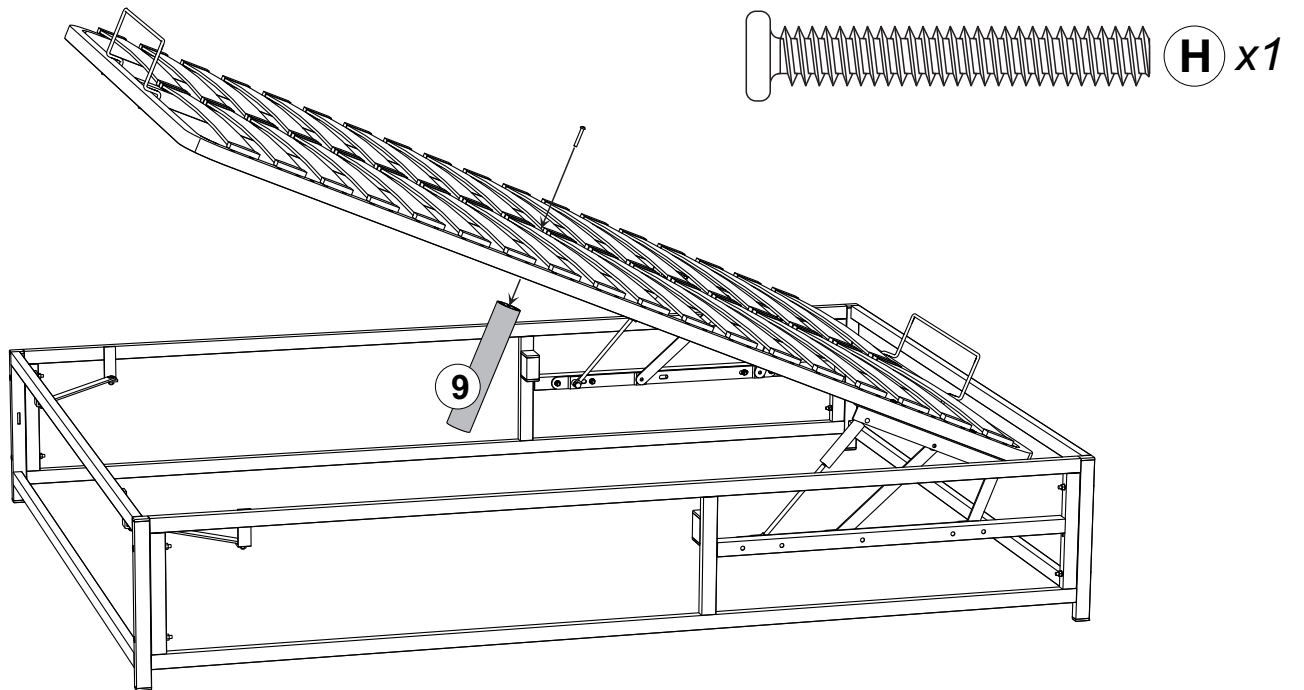

15 ▷

